


dimensions:

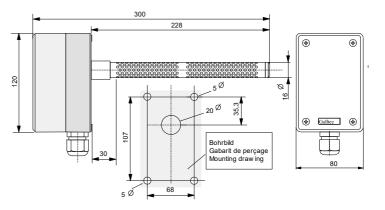

installation- and assembly advice

Please avoid closeness to windows, heatings and other heat sources at assembly. The sensor can be hung up direct on cable. At too much settled dust dynamic attitude can adulterate.

order-code FTS 200...

order example: FTS 200-B-B

output measuring value and power supply humidity

- output 0...10VDC, supply 24VAC/DC -A
- -B output 4...20mA, supply 15...30VDC

output measuring value temperature sensor (optional)

- -0 no options
- with temperature sensor PT100 range 0...100°C = 0...10VDC output -A
- -B with temperature sensor PT100 range 0...100°C = 4...20mA output

version 2.1.1 page 1